Annual Skipper Orientation

Sprite - Pearson 30
June 14, 2020

General Information:

- Hull type Fin w/spade rudder
- Rigging Type Masthead Sloop
- LOA 29.8 ft / LWL 25.0 ft
- Mast Height from DWL 42.25 ft
- Beam 9.5 ft / Draft 5.0 ft
- Aux Power- Universal M-25 Diesel 22hp
- Fuel Tank 20 gals
- Water Tank 22 gals
- Sprite Constructed 1974



Logbook


Logbook located near sink. Information well worth reading.

Specifications and Orientation information.

Sign-in sheet

Through hull fittings – location diagram

Logbook

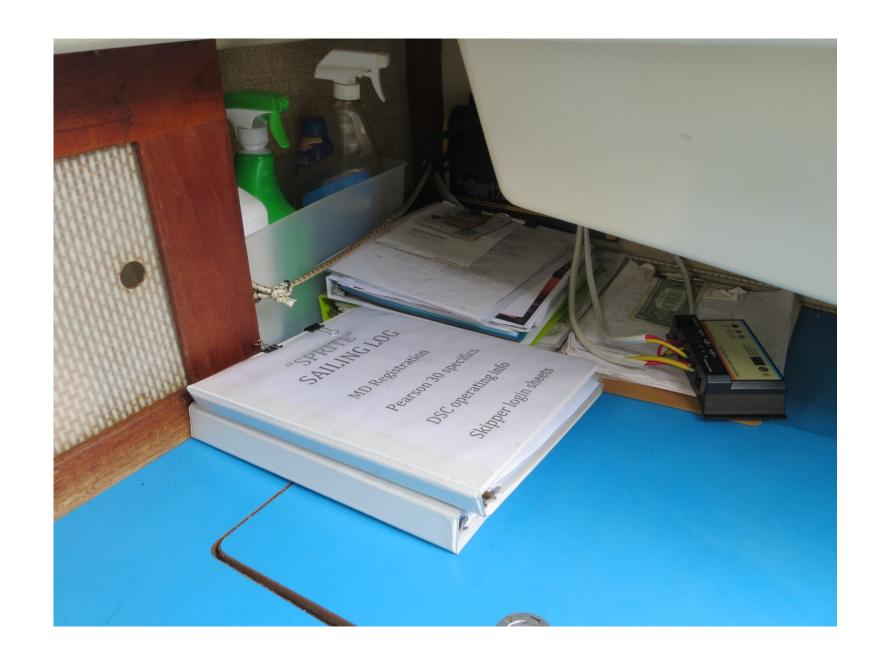

Logbooks- Sailing & Maintenance





Specifications & Orientation Information

• LOA 29.8 ft / LWL 25.0 ft

- Mast Height from DWL 42.25 ft
- Beam 9.5 ft / Draft 5.0 ft



Sign-in Sheet — 1st Page of Logbook


Sprice	Date
Departure	Arrival
Home Port	Destination
Skipper7	Tel/email*
First Mate	Γel/email*
Weather	Wind
Other Crew:	
Fuel Level En	gine hrs run
Life Sling removed/bilge pump on automatic/issues noted	

Data

Sprita

*Report problems to boat manager - Pete Raynor at cpraynor@gmail.com or Martin Lutsky at martinlutsky@hotmail.com

Thru hull fittings - location diagram

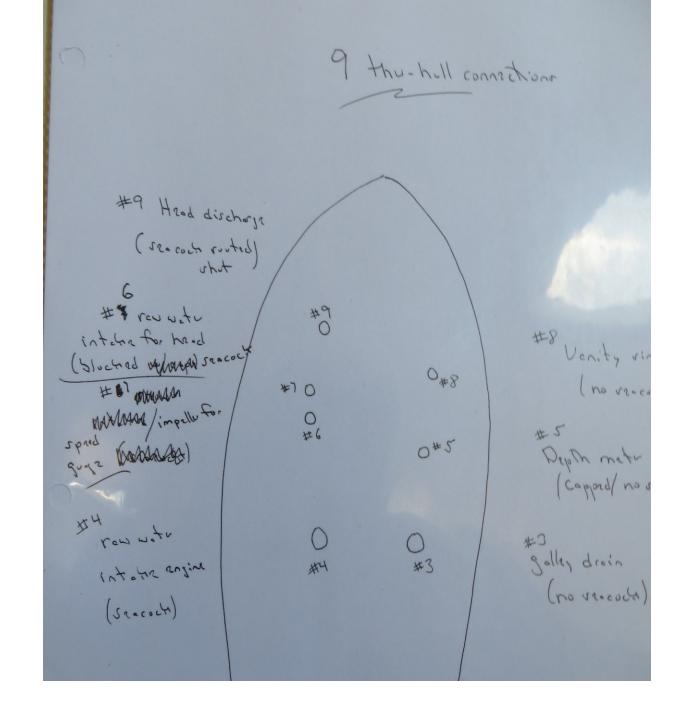


Lazarettes -

Fuel Dip Stick –
 stern lazarette



Lazarettes -

Solar Panel – connection thru starboard lazarette

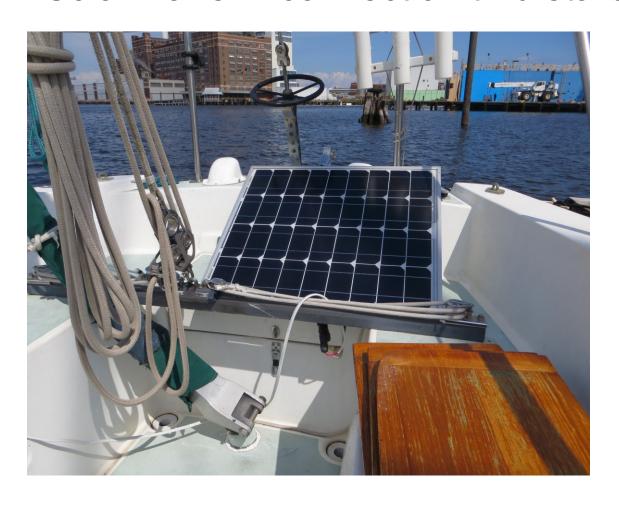




Companionway- 1st step — what's there?

Deck Key –located top step




Companionway- 1st step – what's there?

Other Emergency Items
 flares- horn - regs

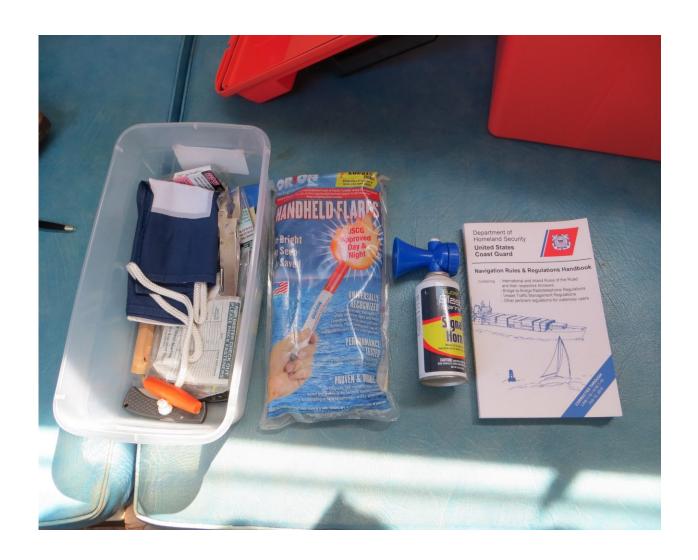

Fuel Check

Deck key & fuel dip stick

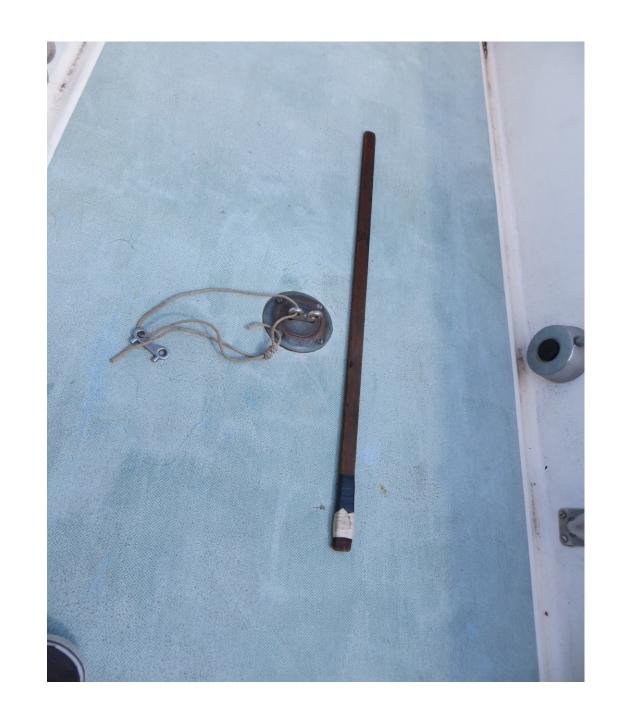

Down Below – interior

Ignition Key – located on VHF radio cord

First Aid Kit

Fire Blanket

Fire Extinguishers – two locations

Below –

Ignition Key –
 on VHF radio cord



Below –


First Aid Kit

Fire Blanket



Below —Fire Extinguishers – two locations



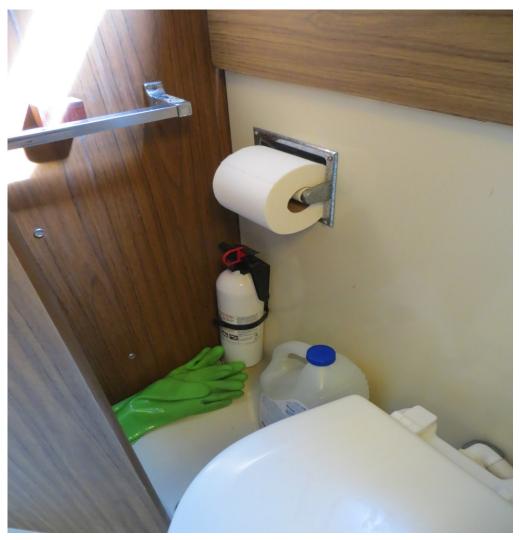

Engine Start

- Battery Selector set on #2 for start
- Insert & turn the key horn will sound until engine starts
- Cockpit Instrument Panel Throttle/ Glow Plug/ Start Button
- Check exhaust for water

Kill switch location & operation

Battery Selector – set on #2 for start



Insert & turn the key – horn will sound until engine starts



Cockpit Instrument Panel – Throttle/ Glow Plug/ Start Button





Electrical Panel

- VHF radio switch
- Nav Lights



Bilge


Hatches –
 check bilge & bilge pump.

• Bilge pump to remain in automatic position.



Bilge

 Bilge pump to remain in automatic position

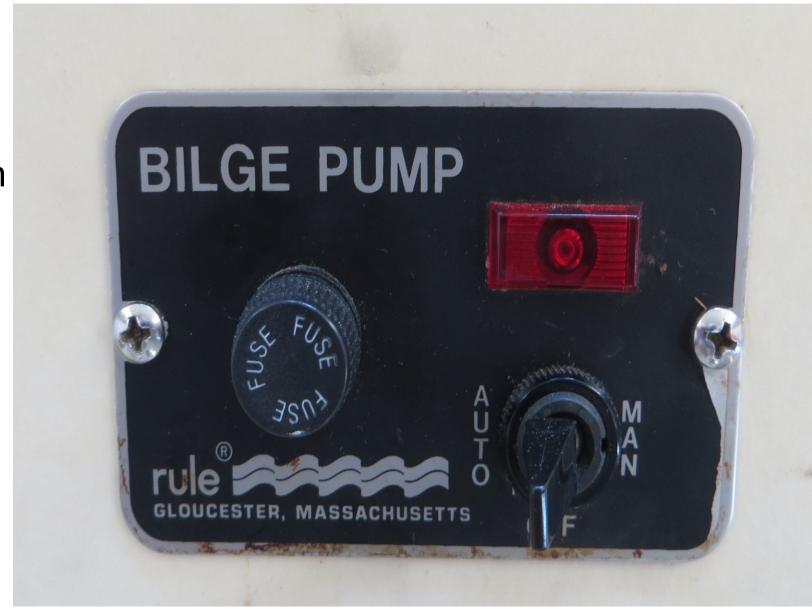


The "Head" — it does work

 Uses internal bladder water to fill & flush

Y Switch - not to be moved.


 No bay water – seacocks are closed.

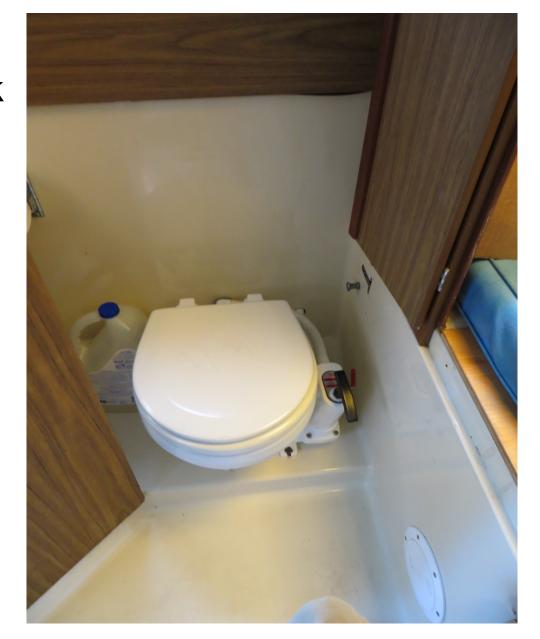

Good to Known Information

- Small cockpit and large tiller. Initially consider limiting crew to four
- Rudder is "free-standing" in reverse hang-on tight. In reverse good amount of prop walk to port.
- 150% genoa in the right wind this will "control" the bow of the boat.
 Consider starting with 100% jib (or even with the shrouds)
- Roller furler maintain tension with jib sheet when furling
- Large three-bladed propeller- need to be in neutral to slow down in both forward and reverse
- Swim ladder in V berth uses stern fittings- best for MOB recovery
- Anchor lots of chain deploy it lightly since it may be hard to retrieve

Small cockpit and large tiller.

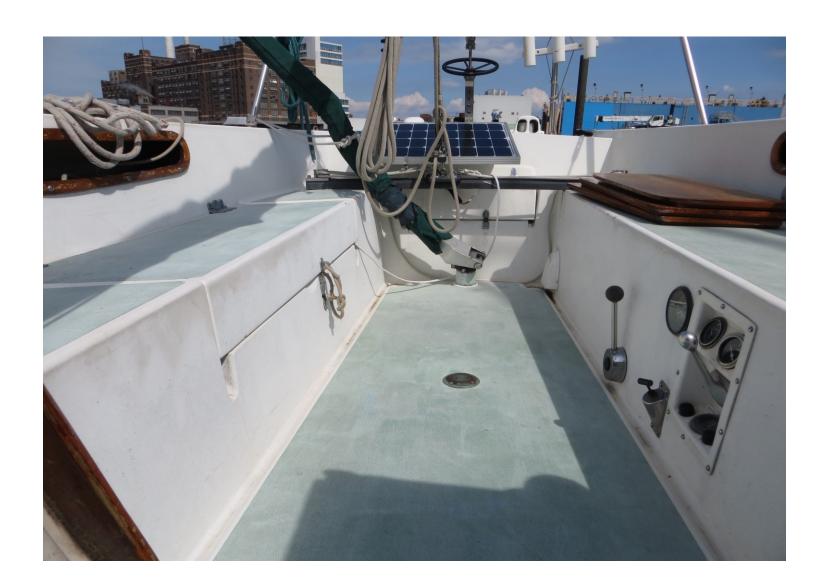

Swim ladder in V berth uses stern fittings- best for MOB recovery





Questions??

