

Annual Skipper Orientation

Messin' About - S2 9.2

June 14, 2020


Boat Manager: Justin Heltzel

Heltzeljustin@gmail.com


General Information:

- Draft 4'11" Fixed Keel Mast Height above water line 43'6" LOA 29'11"
- LWL 25'0" Beam 10'3" Ballast 4000 lbs. Displacement 9800 lbs
- Yanmar Engine 2GMF 13 H.P (diesel)
- Fresh water-cooled
- Raw water heat exchanger
- Fuel: Diesel 15 gal.
- Water: 37 gal Hot water tank 10 gallon Holding Tank 20 gal
- Battery 1 is House
- Battery 2 is Start

Logbooks- Sailing & Maintenance

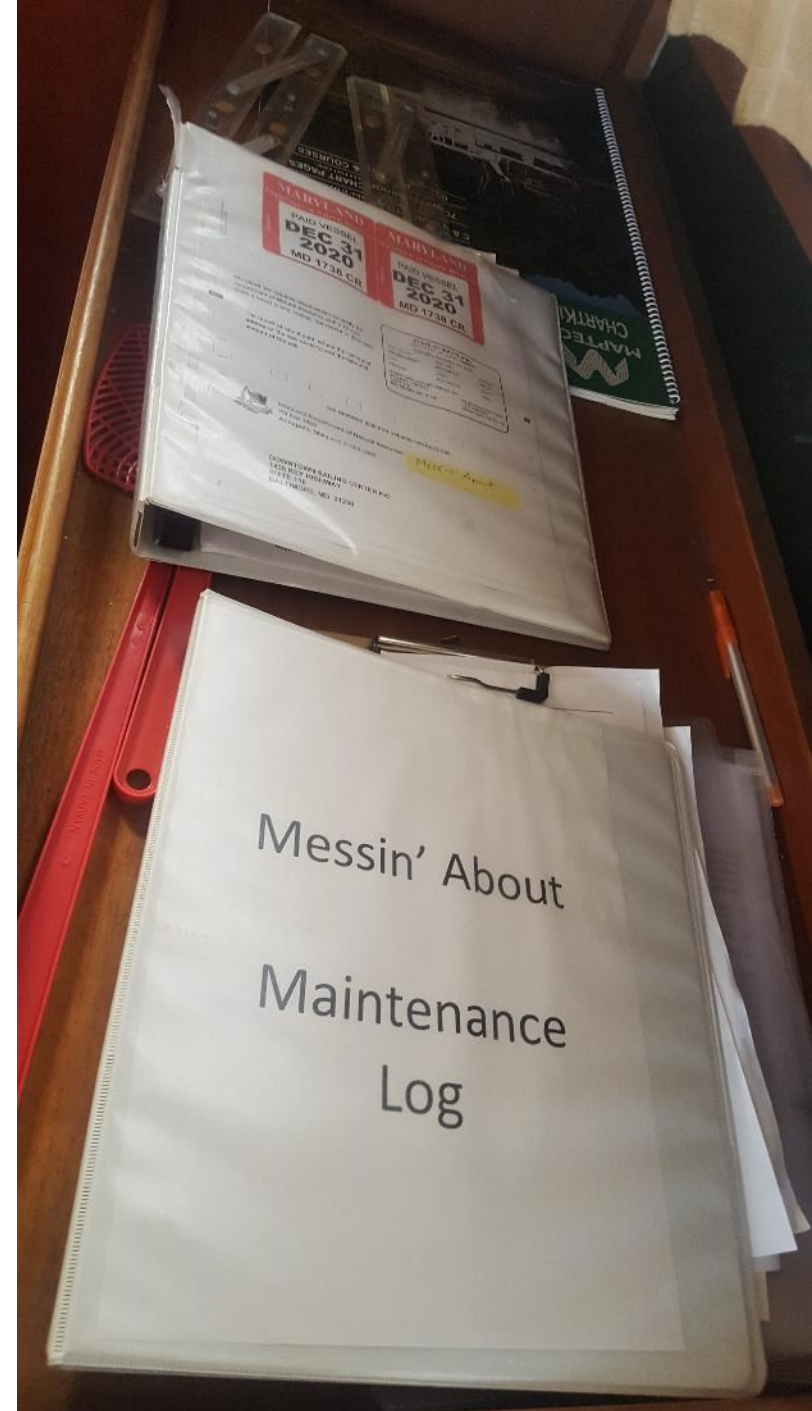

Specifications & Orientation Information

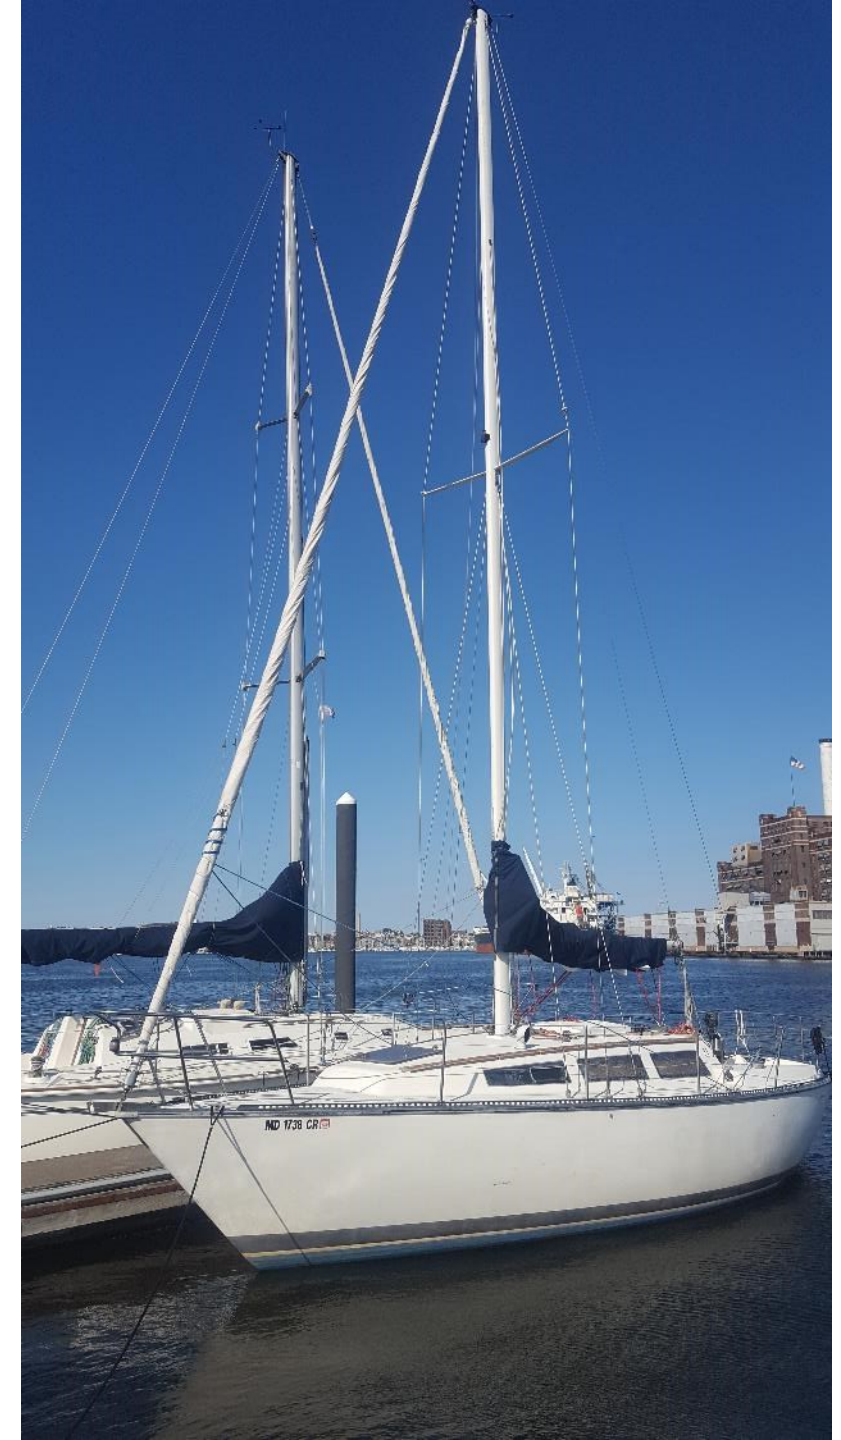

Messin' About



Things to know

Manual bilge



Depth gauge



Gears



Starting key, kill switch and rpm meter





Starboard



Main Halyard
Reef 1
Reef 2



Port



Reef 2
Spin Halyard
Jib Halyard

Lazarettes and Fueling



Dock power cord
Extra fender
Deck brush
Hand pump



Fuel stick gauge
Tiller backup



Solar Panel



Safety Below – interior

- Flares and Air Horn
- First Aid Kit
- Fire Extinguishers – two locations

Companionway



Mid-cabin



Winches and fuel key



Locate the raw water seacock, on left side of engine behind door panel under sink. During off season the key will be located on the seacock.



During the season, the seacock is left opened. Handle vertical position. Off season, please make sure the seacock is opened.



Check Oil –dip stick on left side of engine behind door panel
under sink.

(During the season this action can be skipped, Off season, it is mandatory).



To Start: Turn Battery switch to 2



To Start: Make sure gearshift is in neutral.




To Start: Advance throttle a little.



To Start: The key is located on the radio cord.



To Start: Put key in ignition switch and turn. Oil pressure Alarm will Buzz. Push starter button. When engine starts release the button. If the oil pressure alarm continue to buzz, turn off the engine immediately and check the oil level.

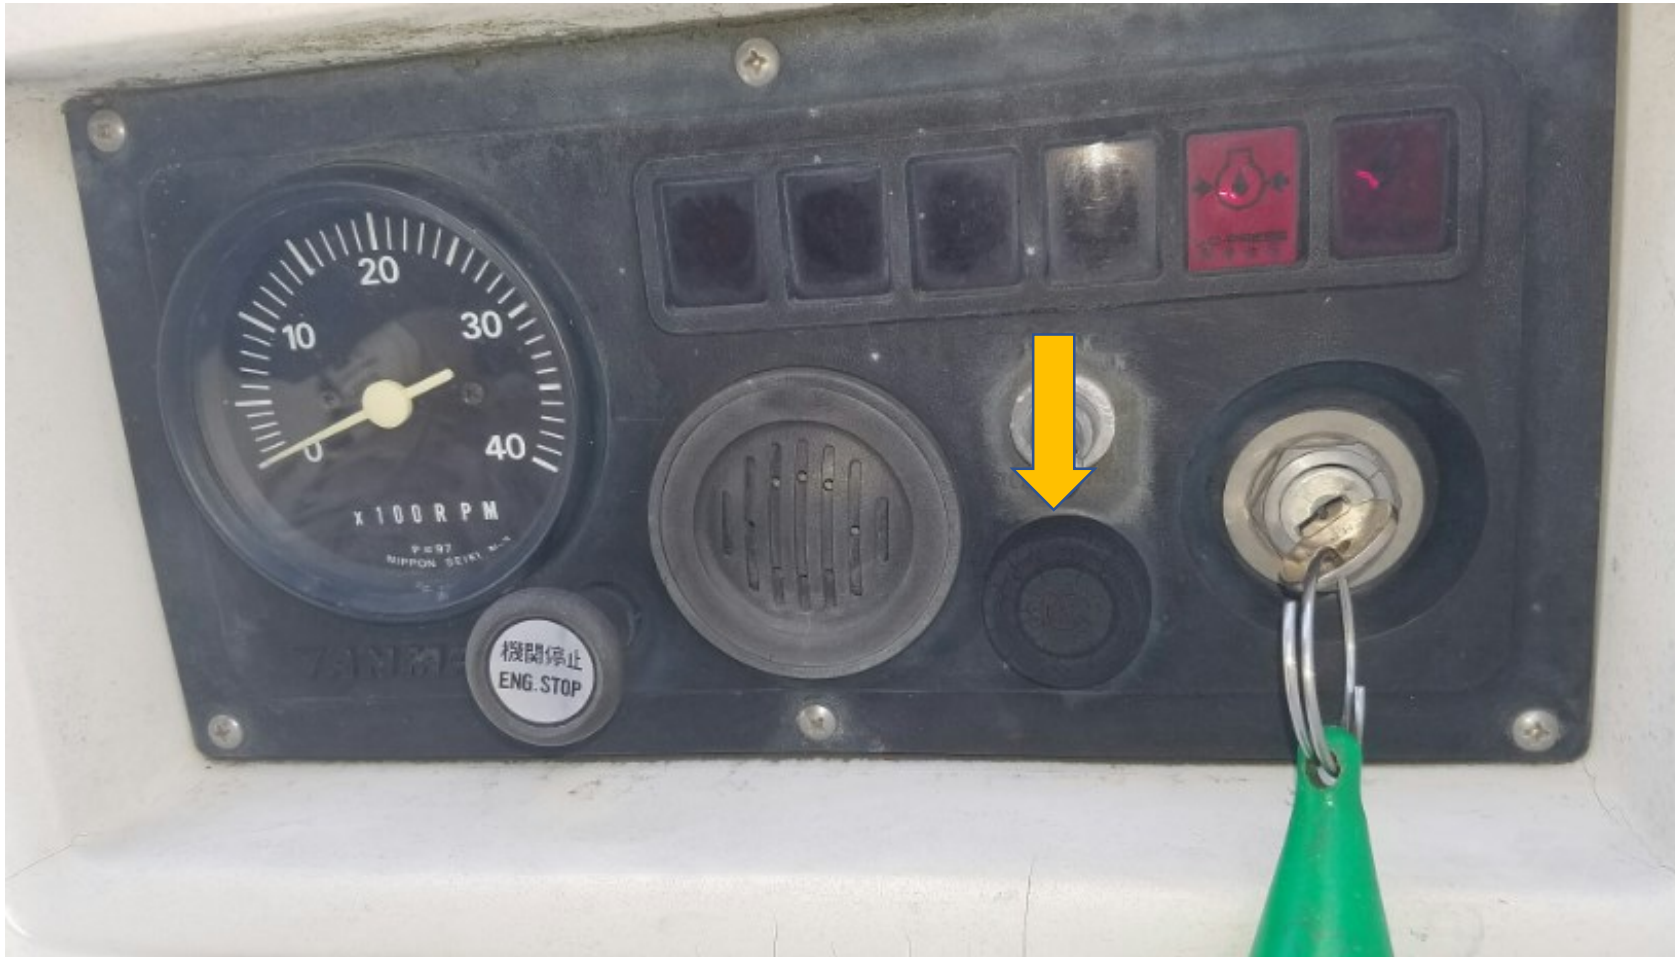

After Starting: Verify water coming out of exhaust (startbaord side of the boat).



After Starting: Put the switch batteries to " ALL"



Before Sailing: Turn on the instruments (switch inst. #1)



Before Sailing: Turn on the radio on channel 16 (switch #3 VHF Radio)



Questions?